

DW DESCALER

DISHWASHER DESCALER

Description

DW Descaler is a strong acidic solution formulated for the safe removal of scale, rust and lime build up in automatic dishwashing and glass washing machines.

Benefits

- ✓ Fast and effective to use
- ✓ Safe to use on most commercial equipment
- ✓ Heavy duty commercial grade formulation

Where to Use

Removal of scale, lime, calcium and organic continuations within;

- ✓ Dishwashing Machines
- ✓ Glasswashing Machines
- ✓ Laundry Washing Machines
- ✓ Ice Machines

Directions

Follow the steps below for dishwashing and glasswashing machine descaling:

1. Switch off chemical dosing equipment.
2. Fill wash tank with clean water and add 1-2 litre of DW Descaler
3. Run the dishwasher through it's longest cycle 10-15 minutes.
4. Drain tank and inspect. Some scrubbing may be required for heavy build ups.
5. Refill with fresh water, run machine for 2-5 minutes and drain.
6. Switch on chemical dosing equipment.

First Aid

If poisoning occurs contact a Doctor or Poisons Information Centre. PH 13 11 26. Do not induce vomiting. If swallowed give a glass of water and seek medical advice. If skin contact occurs remove contaminated clothing and wash the affected areas with water. For eyes, irrigate with water for 15 minutes and seek medical advice.

Warning

DW DESCALER is an acidic product. Avoid skin and eye contact when handling..

Packaging

DW DESCALER is available in 5 litre containers.